TOUCH/LRACOMBOGEVB

TOUCH/LRACOMBOGEVB Evaluation Board User's Manual

Scope

The TOUCH/LRACOMBOGEVB demo showcases ON Semiconductor's High-Accuracy Capacitive Touch Sensor (LC717A10AR) along with Linear Vibrator Driver (LC898301XA) for haptic feedback and an 8-bit Microcontroller (LC87F1M16A). The following is an instruction manual for the operation of this evaluation board.

Necessary Equipment

- 1 Mini-B USB Cable with PC (Figure 1) or
- 1 AC to DC 5 V USB Adapter (Figure 2)

Figure 1. Mini-B USB Cable

Figure 2. USB Adapter

Overview

Microcontroller (LC87F1M16A) distinguishes the keys of Touch Switch (LC717A10AR) by using I^2C and control the actuator of Haptics (LC898301XA), LED and speaker.
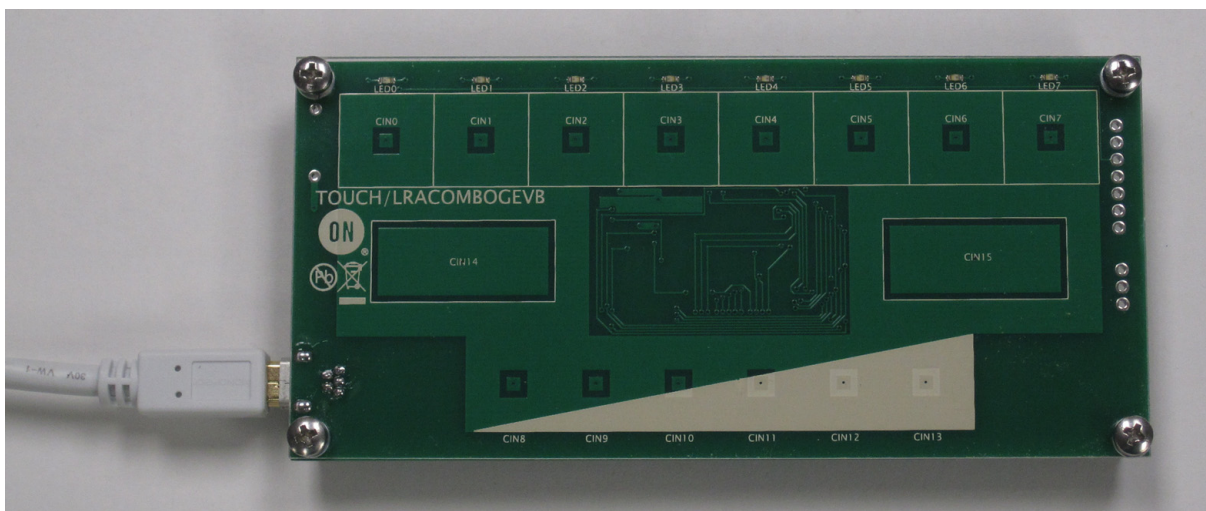
The power supply is supplied from USB.

Figure 3. Board with USB Cable

September, 2014 – Rev. 0
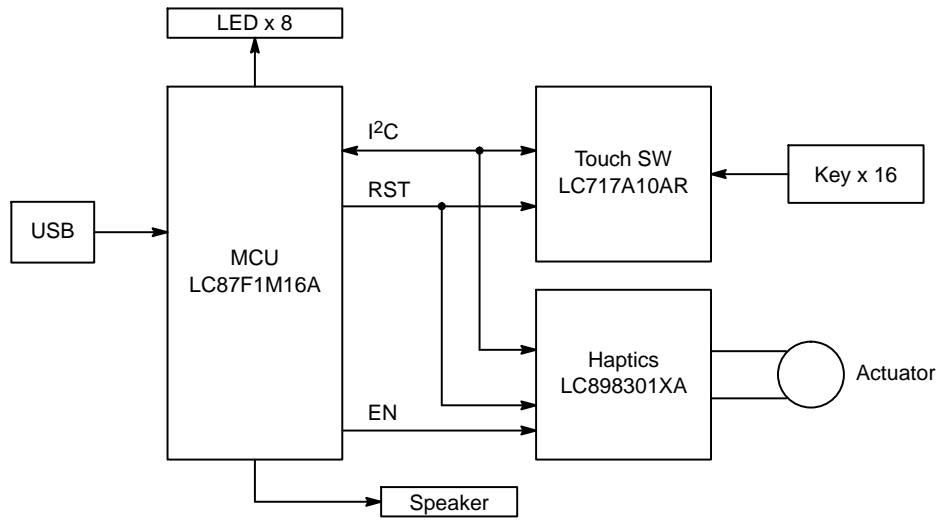
TOUCH/LRACOMBOGEVB
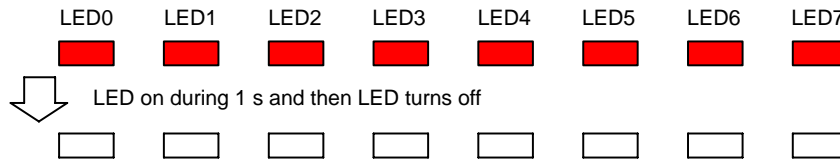
BLOCK DIAGRAM

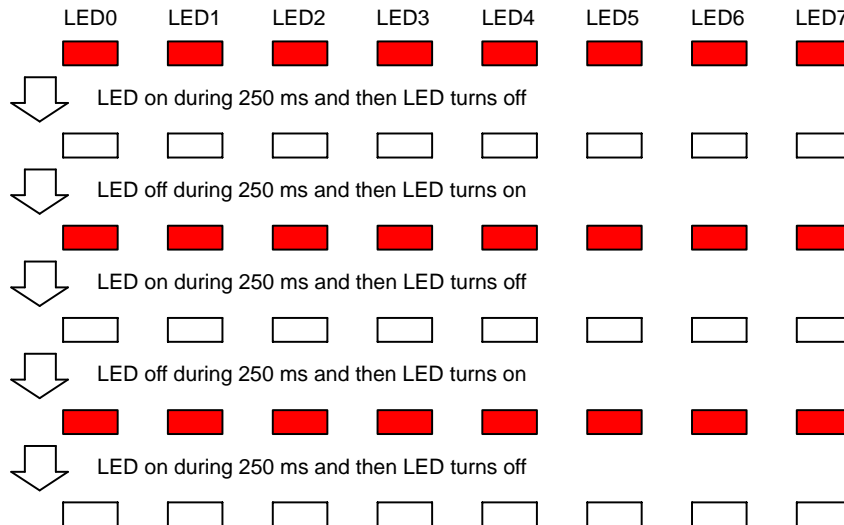**Figure 4. Block Diagram**

TOUCH KEY FUNCTIONS

Connect USB Cable

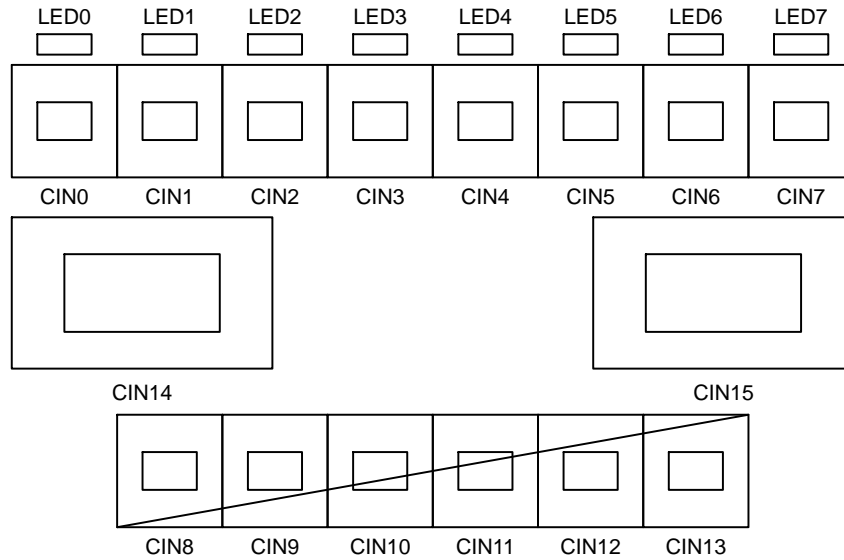LED turns on for one second when 5 V is applied to VDD.

LED blinks three times when USB is connected if the USB driver is available. (USB driver is optional. It is necessary when updating the firmware.)
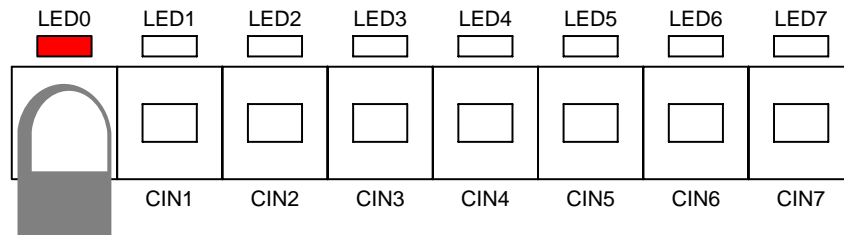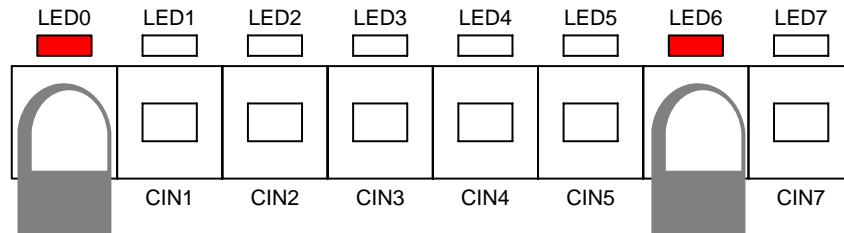
TOUCH/LRACOMBOGEVB

Key Layout

Normal Key Action

When key is touched upper LED of each key turns ON.
e.g. CIN0 is touched LED0 turns ON.


When multiple keys are touched.

When key is touched, speaker plays respected musical scale. CIN0 is "Do", CIN1 is "Re"…CIN6 is "Si", and CIN7 is upper "Do".
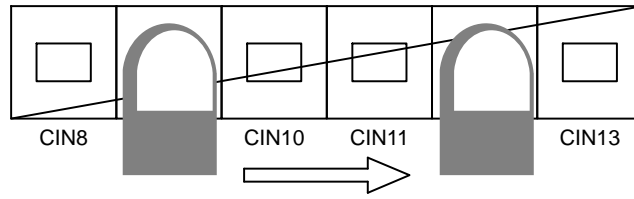
Slide Key Action

These slide keys can change the sensitivity (AMP gain and threshold level) of the Proximity Keys (CIN14, CIN15).

The slide keys have 11 kinds of sensitivity levels. When touch the slide key, the LED of each level is ON. e.g. Level 3
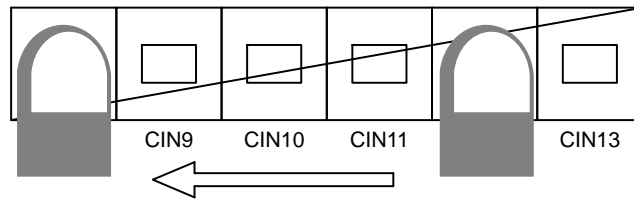
LED0   LED1   LED2   LED3   LED4   LED5   LED6   LED7

CIN8   CIN10   CIN11   CIN12   CIN13
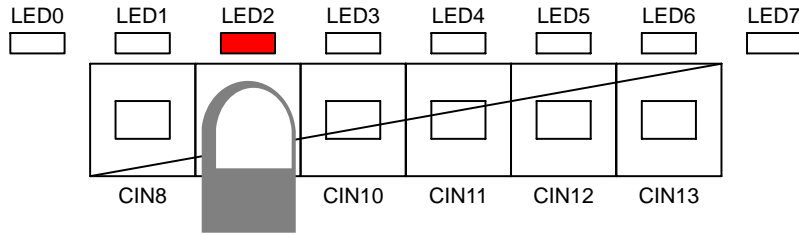
move right on the Touch key,

CIN8   CIN10   CIN11   CIN13

to increase the sensitivity level.

LED0   LED1   LED2   LED3   LED4   LED5   LED6   LED7

move left on the Touch key,

CIN9   CIN10   CIN11   CIN13

to decrease the sensitivity level.

LED0   LED1   LED2   LED3   LED4   LED5   LED6   LED7

Correspondence of the sensitivity levels of LED and touch key.

Level	LED0	LED1	LED2	LED3	LED4	LED5	LED6	LED7	Touch Key
1	●	●							CIN8
2		●	●						CIN8 and CIN9
3			●						CIN9
4			●	●					CIN9 and CIN10
5				●					CIN10
6				●	●				CIN10 and CIN11
7					●				CIN11
8					●	●			CIN11 and CIN12
9						●			CIN12
10						●	●		CIN12 and CIN13
11							●	●	CIN13

Proximity Key Action

These proximity keys react without touch. Bleep sounds when keys are approached. When close to CIN14 LEDs on left side turn ON.
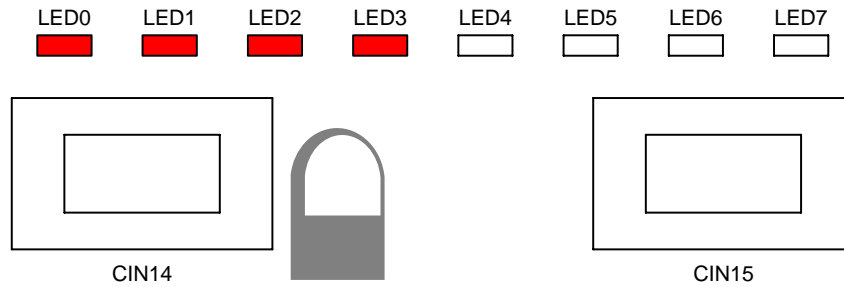
When close to CIN15 LEDs on right side turn ON.
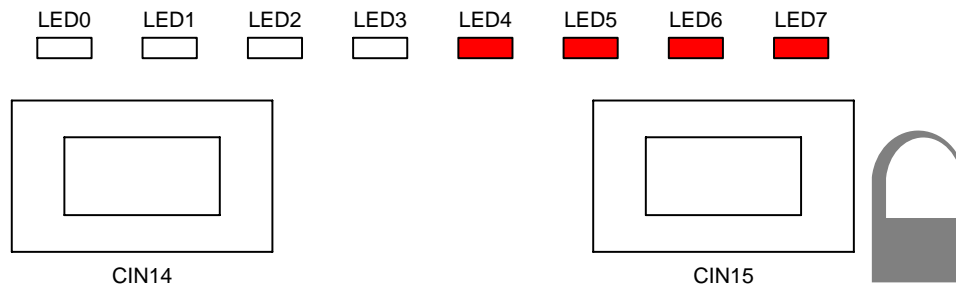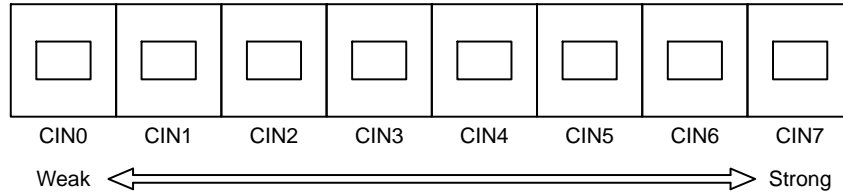
TOUCH/LRACOMBOGEVB

HAPTIC FUNCTIONS

When any key is touched, Linear Resonant Actuator (LRA) vibrates. There are several types of vibrations.

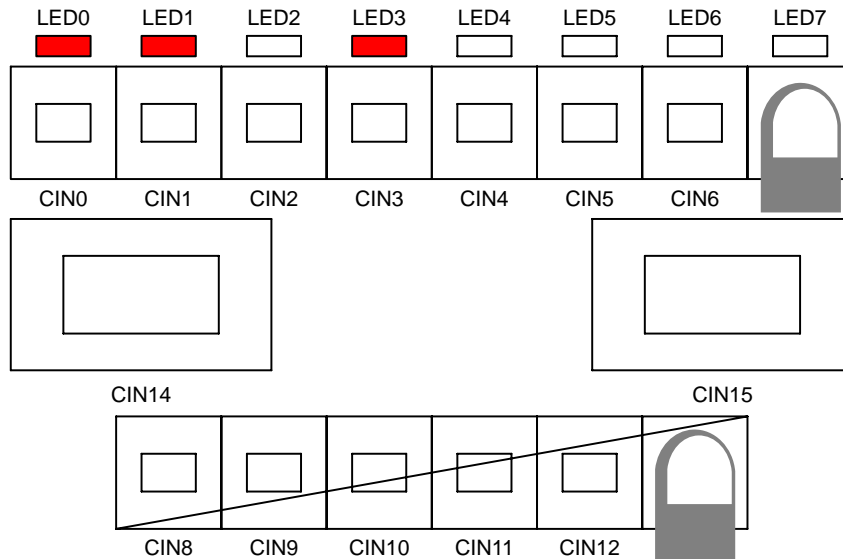Vibration level changes depending on touch key of CIN0 to CIN7.

Vibration Level

When any key is touched, Linear Resonant Actuator (LRA) vibrates.

CIN0　CIN1　CIN2　CIN3　CIN4　CIN5　CIN6　CIN7

Weak ⟵⟶ Strong

Change Resonance Frequency

Our Haptics IC can use 32 pattern of resonance frequency for LRA. This evaluation board uses two patterns 175 Hz and 205 Hz. (default is 205 Hz)

When touching both CIN7 and CIN13, current resonance frequency is displayed. e.g. Current frequency is 205 Hz. (setting data is "0Bh")

LED0　LED1　LED2　LED3　LED4　LED5　LED6　LED7

CIN0　CIN1　CIN2　CIN3　CIN4　CIN5　CIN6

CIN14　CIN15

CIN8　CIN9　CIN10　CIN11　CIN12

Hold keys during 5 seconds, then resonance frequency will change. Bleep noise will sound at the same time.

If current resonance frequency is 205 Hz, then resonance frequency will change to 175 Hz.

LED0　LED1　LED2　LED3　LED4　LED5　LED6　LED7

Change Setting to "05h" (= 175 Hz)
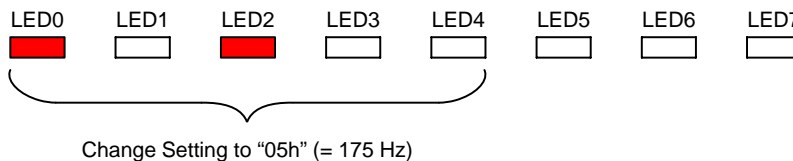
If current resonance frequency is 175 Hz, then resonance frequency will change to 205 Hz.

LED0　LED1　LED2　LED3　LED4　LED5　LED6　LED7

Change Setting to "0Bh" (= 205 Hz)
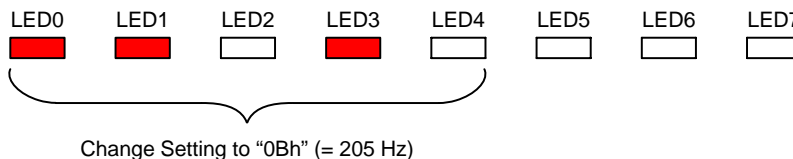
TOUCH/LRACOMBOGEVB

OTHER FUNCTIONS

Touch ON Automatic Cancellation

LC717A10AR does not have Touch ON automatic cancellation function. So, the software implements the auto touch-off function for a fail-safe. Auto off time is about 8 seconds.

Reset Switches

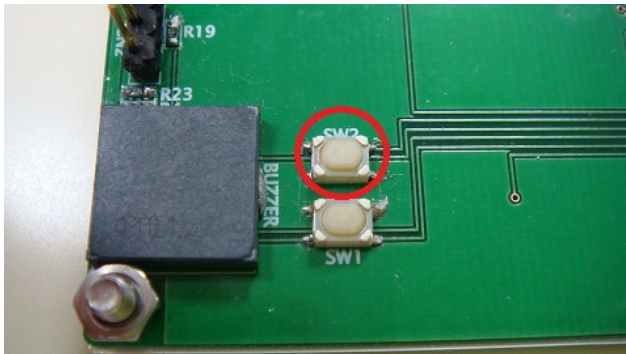If you observe the board is not a normal condition, push the Reset Switch (SW2) of the backside.

SW1 is reset switch for LC717A10AR and LC898301XA. However MCU resets these ICs during the initialization process when MCU program starts up. So, normally SW1 is not used.
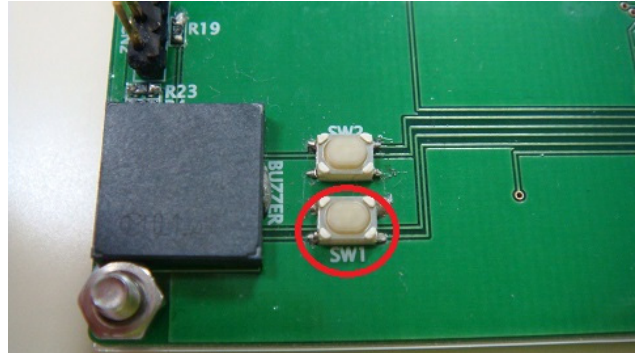
Figure 6. Reset Switch of LC717A10AR and LC898301XA

Figure 5. Reset Switch of MCU

RELATED DOCUMENTS

Supporting materials such as: Datasheets, Application Notes, Evaluation Kits/Boards, Evaluation Board Documents and Software are available for all three featured ON Semiconductor components. To obtain the most updated documentation please visit the ON Semiconductor Web site at www.onsemi.com and search part numbers: LC717A10AR (Touch Sensor), LC898301XA (Linear Vibrator Driver), and LC87F1M16A (Microcontroller).

ON SEMICONDUCTOR IC LINKS

- LC717A10AR: http://onsemi.com/PowerSolutions/product.do?id=LC717A10AR
- LC898301XA: http://onsemi.com/PowerSolutions/product.do?id=LC898301XA
- LC87F1M16A: http://onsemi.com/PowerSolutions/product.do?id=LC87F1M16A

EVBUM2255/D